

# WINTERIZE YOUR EQUIPMENT

How to protect your pressure washer from freezing!

## Hot Water Unit

Method #1 – Requires 1-2 Gallons of RV or Regular Anti-Freeze

1. Fill your float tank with anti-freeze.
2. Run machine until you see the anti-freeze come through the nozzle.
3. Run machine for 10-12 seconds to ensure that everything is internally coated with anti-freeze

**\*\*This must be done between each use during the winter\*\***

Method #2

1. Remove the nozzle from the end of the wand.
2. Turn off and disconnect the water supply.
3. Turn on pump to empty the float tank.
4. Drain any remaining water from the float tank by removing the drain plug located on the bottom of the float tank.
5. Locate the air valve on the pump.
6. Connect an air hose to the air valve to blow water out of the pump, coil, and hose. If the machine has a trigger gun, you must hold the trigger open during this step!
7. Disconnect air.
8. Turn pump by hand for several revolutions to ensure all water is out of the system.
9. Reconnect air hose for a minimum of 30 seconds to ensure all water has been pushed from system. If the machine has a trigger gun, you must hold the trigger open during this step!
10. Replace the nozzle to the end of the wand.
11. Store machine in a warm dry building.

**\*\*This must be done between each use during the winter\*\***



DPW Sales & Service  
901 Ulrich Ave.  
Louisville, KY 40219

p. 502-966-2564  
f. 502-966-2564  
[www.dpwservices.com](http://www.dpwservices.com)